



9" In Car DVD Player

MODEL NUMBER: 61278

USER GUIDE

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538

REP.IRELAND HELPLINE N°: 1800 995 036

WEBSITE: www.quesh.co.uk

EMAIL: enquiries@quesh.co.uk



Contents

- 1. Welcome Section
- 2. General Information & Safety Instructions
- 4. Contents & Features
- 5. Controls
- 7. Setup
- 9. Key Functions
- 10. Getting Started
- 11. Using USB, SD/MMC
- 12. Connecting an External Device
- 12. Headrest Mounting
- 13. System Setup
- 15. Specifications

After Sales Support

UK/N.IRELAND HELPLINE N^o: 01270 508538
REP.IRELAND HELPLINE N^o: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk

Welcome Section

Congratulations!

You have made an excellent choice with the purchase of this quality MAXTEK® product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Qesh Ltd.

We want you to be completely satisfied with your purchase so this MAXTEK® product is backed by a comprehensive manufacturer's 3 year warranty and outstanding after sales service through our dedicated helpline.

We hope you enjoy using this product for many years to come.

If you require technical support or in the unlikely event that your purchase is faulty, please telephone our helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have a satisfactory proof of purchase (keep your receipt safe). This does not affect your statutory rights. However be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused and/or disassembled.

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538
REP.IRELAND HELPLINE N°: 1800 995 036
WEBSITE: www.qesh.co.uk
EMAIL: enquiries@qesh.co.uk




General information & Safety Instructions

This remote control is powered by 1 x 'CR2025' battery.

Do not dispose of batteries in your household waste.

Please contact your local authority for details on safe disposal.

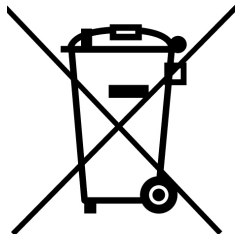

- Never throw batteries into a fire or expose to excessive heat sources.
- If batteries are swallowed, please seek immediate medical attention.
- Always ensure correct +/- battery polarity when installing batteries.
- Do not recharge non-rechargeable batteries.

Equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your local authority waste disposal department, as they will be able to provide details of the recycling options available in your area.



Electrical and electronic equipment (WEEE) contains materials, parts and substances, which can be dangerous to the environment and harmful to human health if the waste of electrical and electronic equipment (WEEE) is not disposed of correctly.

Equipment, which is marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your local authority waste disposal department, as they will be able to provide details of the recycling options available in your area.

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538

REP.IRELAND HELPLINE N°: 1800 995 036

WEBSITE: www.qesh.co.uk

EMAIL: enquiries@qesh.co.uk

General information & Safety Instructions

Please read the following safety information before use.



- To avoid risk of electric shock do not attempt to open this appliance.
- Keep away from fire.
- Do not expose the appliance to water, rain or dampness.
- Keep this appliance away from direct sunlight and other heat sources.
- Keep this appliance away from strong magnets.
- Never cover the ventilation slots on the underside or back of the appliance.
- Avoid placing heavy objects on top of the appliance.
- Always disconnect the appliance from mains power before cleaning.
- Clean the exterior of the appliance with a soft cloth only.
- The instructions for use shall state that the appliance shall not be exposed to dripping or splashing and that no objects filled with liquids such as vases, cups, etc, shall be placed on the appliance.
- **CAUTION:** Danger of explosion if the battery is incorrectly replaced. Replace only with the same equivalent type.
- Where the MAINS plug or appliance coupler is used as the disconnect device, the disconnected device shall remain readily operable.
- Where an all-pole MAINS SWITCH is used as the disconnect device, the location on the apparatus and the function of the switch shall be described, and the switch shall remain readily operable.

NEVER LEAVE CHILDREN UNATTENDED WITH ELECTRICAL EQUIPMENT

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538
REP.IRELAND HELPLINE N°: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk

Contents & Features

Contents

- 1 x 9" Master DVD monitor
- 1 x 9" Secondary DVD monitor
- 1 x Remote Control
- 1 x 9.5V Mains adaptor
- 1 x 12V In-car adaptor
- 1 x Combi AV/power lead
- 2 x Headrest mounting straps
- 1 x AV cable

Features

- 9" digital screens
- PAL/NTSC/Auto
- USB port
- SD/MMC port
- JPEG picture format supported
- DVD, AVI, MPEG4 & DIVX video formats supported
- CD audio format supported
- 9.5v mains adaptor (included)
- 12v in-car adaptor (included)
- Remote control (included)
- Headphone output
- AV output
- AV input

Region Encoding

In compliance with DVD patent requirements, the region code for this DVD player is region 2.




After Sales Support


UK/N.IRELAND HELPLINE N^o: 01270 508538
REP.IRELAND HELPLINE N^o: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk

Controls

MAIN CONTROLS MASTER MONITOR

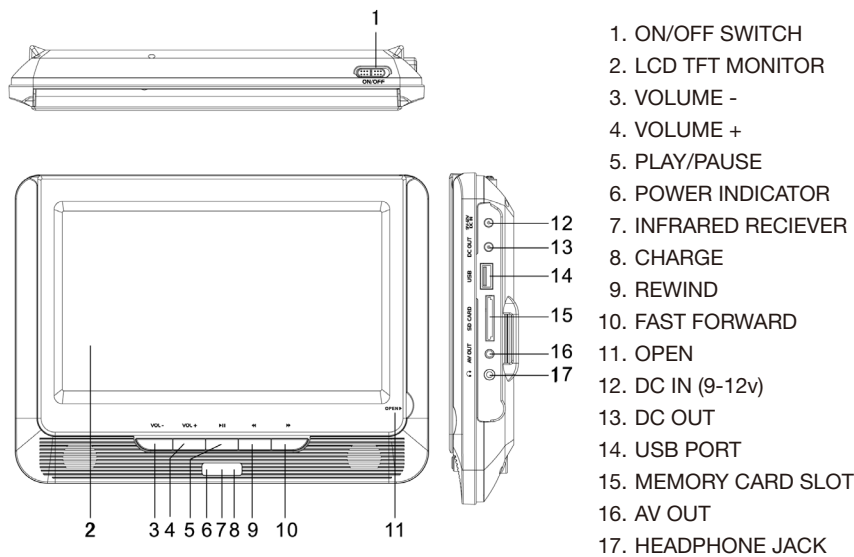


MAIN CONTROLS SECONDARY MONITOR

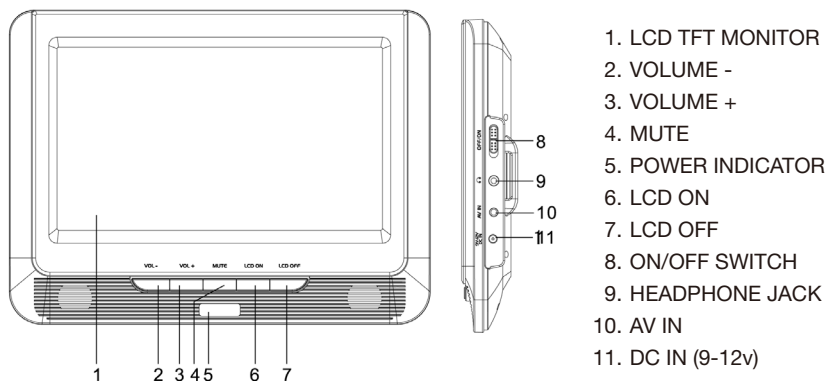

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538
REP.IRELAND HELPLINE N°: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk

Remote Control

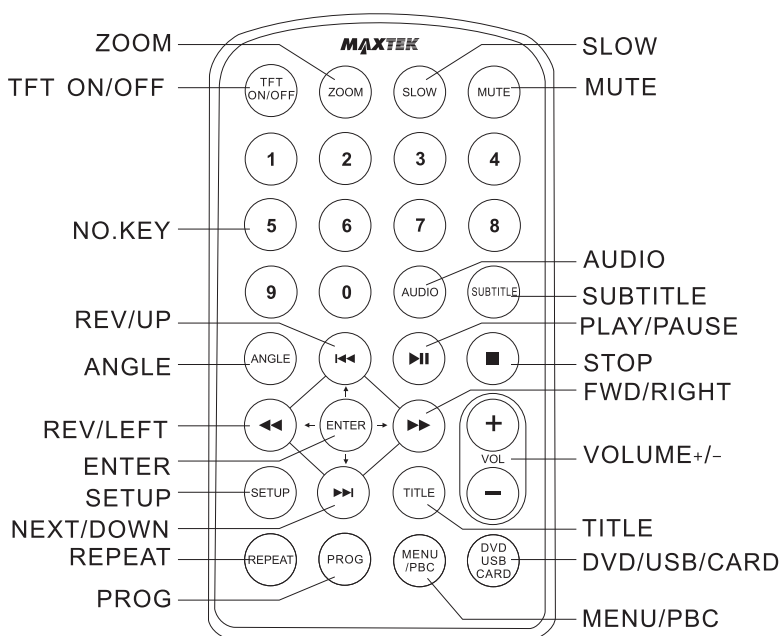

Battery Installation/removal




Please Note:
Battery type required is 'CR2025'

After Sales Support
UK/N.IRELAND HELPLINE N°: 01270 508538
REP.IRELAND HELPLINE N°: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk

Setup

Setting up one screen

Connect the chosen adaptor to the mains outlet and the other end in to the 'DC in' socket on the DVD player. The master monitor will work off both the mains and/or the internal battery, providing it is fully charged.

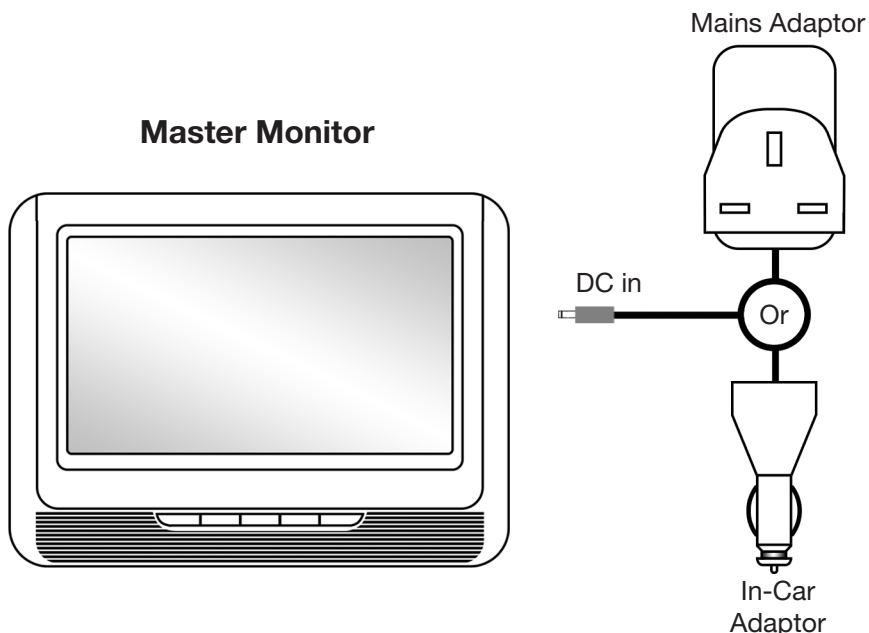

Charging the Battery

The DVD player uses a built in lithium-polymer rechargeable battery. To charge the DVD player connect the adaptor as shown in the diagram above. It takes 6 hours to fully charge the battery. The LED indicator will change from red to green when it is fully charged. After a full charge the battery can be used for up to 3 hours.

Please Note:

Keep away from heat sources when the unit is charging as the unit will become hot during charging.

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538
REP.IRELAND HELPLINE N°: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk


Setup

Setting up both screens

Please follow the diagram on this page to set up the secondary monitor to the master monitor.

Please Note:

The secondary monitor will only work if the adaptor is connected to the master monitor and the connecting leads are attached between both units.

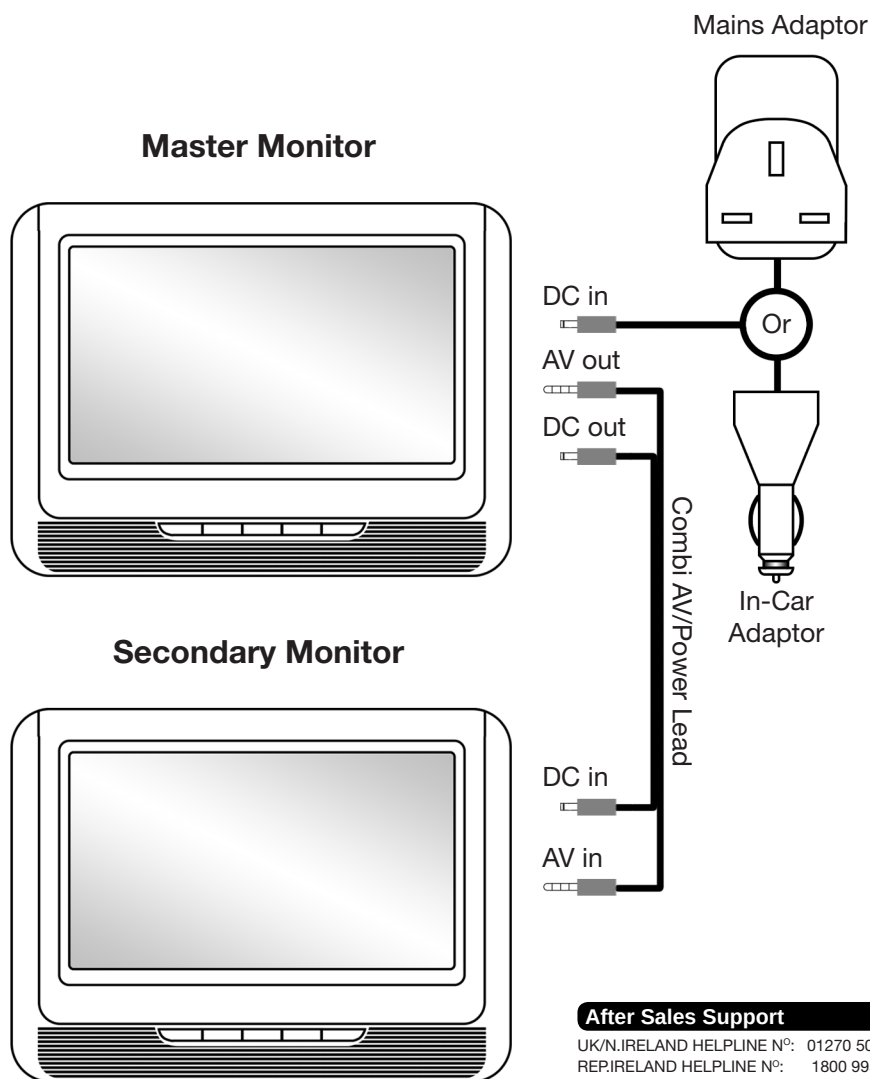

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538

REP.IRELAND HELPLINE N°: 1800 995 036

WEBSITE:

www.qesh.co.uk

EMAIL:

enquiries@qesh.co.uk

Key Functions

The functions of each key are detailed below. The main function keys appear both on the the remote control (RC) and the DVD player.

Zoom	To enlarge the picture
Mode	DVD and external audio and video input conversion
Number Key	For inputting number digits
Prev/Up	To skip Backward/ To Move up in the Menus
Angle	Switch between multiple camera angles
Rev/Left	Reverse/moving left In menus
Enter	Enter is used for selecting
Setup	To Enter the Setup menu
Next/Down	To skip forward / to move down in the menus
Repeat	To repeat the selection
Prog	To play contents of disc in the order you want by, programming the track to be played
Slow	To slow the DVD down
Mute	To mute the DVD player
Audio	To change the audio setting.
Subtitle	To switch subtitles and turn on or off
Play/Pause	To play or pause
Stop	To Stop the DVD
FWD/Right	Forward/moving right In menus
Volume	To adjust the volume level
Title	To Show the DVD title
DVD/USB/Card	To select between DVD, USB and card input
Menu	To access the DVD player menu



Play / Pause



Stop



Skip Back Chapter



Skip Next Chapter



Rewind

(x2, x4, x8, x16, x32)



Fast Forward

(x2, x4, x8, x16, x32)

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538

REP.IRELAND HELPLINE N°: 1800 995 036

WEBSITE: www.qesh.co.uk

EMAIL: enquiries@qesh.co.uk


Getting Started

Basic DVD Operation

- Before first time use, open the disc cover and carefully remove and discard the white cardboard dust cover from inside the deck marked “Warning: Please take out this card before playing”.
- Remove all transparent film protection from the DVD player.
- Connect the mains power adaptor to the mains outlet and the DC in socket.
- Turn the power switch on the right-hand side panel to ‘ON’.
- Insert a DVD and press the play button.

Connecting to a TV (AV Cable included)

You can connect the DVD player to a TV so that your movies, pictures and music can be played on your larger screen.

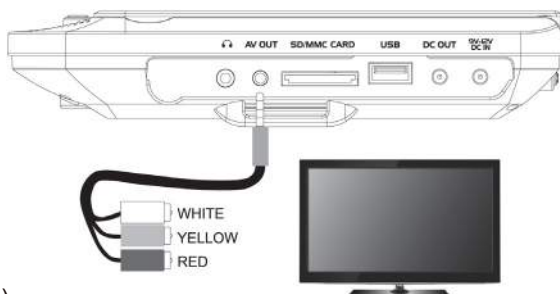

(Master Screen)

- Insert the 3.5mm jack end of the 3.5mm to RCA cable into the AV out port on the master screen.
- Connect the three RCA plugs to the corresponding coloured ports on your TV, normally located on the back.
- Choose the correct AV channel on your TV to view the content of the DVD player.

Please note:

If your TV does not have a ‘RCA in’ port, you may need a RCA to SCART adaptor to use this function, if a SCART port is available.

After Sales Support

UK/N.IRELAND HELPLINE N^o: 01270 508538
REP.IRELAND HELPLINE N^o: 1800 995 036
WEBSITE: www.qesh.co.uk
EMAIL: enquiries@qesh.co.uk

Using the USB, SD/MMC Slot

Memory Cards

- Connect the SD/MMC card into the named port on the side.
- Press and hold the 'DVD/USB/CARD' button to enter the DVD/USB/CARD mode.
- Use the up/down arrow keys to highlight 'Card Mode' and press the 'Enter' button to select it.
- Press the 'Play' button to play selected media from the memory card.

USB Memory Stick

- Connect the USB memory stick into the named port on the side.
- Press and hold the 'DVD/USB/CARD' button to enter the DVD/USB/CARD mode.
- Use the up/down arrow keys to select 'USB Mode' and press 'Enter'.
- Press the 'Play' button to play selected media from the USB memory stick.

Please note:

Make sure the memory card or USB stick storage is no bigger than 8Gb and formatted to FAT32. You can do this through a computer/laptop. Video file formats must be in DVD, AVI, MPEG4 or DIVX.

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538
REP.IRELAND HELPLINE N°: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk

Connecting external devices

Connecting a Device (AV Cable included)

You can connect the output of a device that uses RCA out to this DVD player and show the image or video feed.



(Secondary Monitor)

- Insert the 3.5mm jack end of the 3.5mm to RCA cable into the 'AV in' port on the slave screen.
- Connect the three RCA plugs to the corresponding coloured 'RCA out' ports on your chosen device.
- Press 'mode' on the DVD player and switch it to 'AV in'. This will now show the connected live feed on the DVD player.

Headrest Mounting

To attach the DVD screens to the headrest, thread the velcro strap through the loops on the back of the screens.



Then wrap the strap tight around the headrest and fasten securely with the velco straps.

After Sales Support

UK/N.IRELAND HELPLINE N^o: 01270 508538
REP.IRELAND HELPLINE N^o: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk

System Setup

System Setup

Press **SETUP** on the remote control or DVD player to enter the Setup Menu. Here you will find the following options:

General Setup, Audio Setup, Dolby Digital Setup, Video Setup and Preference Page.

You can navigate through the menus with the arrow buttons and select an option with enter button on both the remote control and DVD player.

General Setup Page

FUNCTION	OPTION
TV Display	Normal/PS, Normal/LB, Wide.
Angle Mark	On / Off.
OSD Language	English, French, German, Italian, Spanish, Portuguese.
Captions	On / Off.
Screen Saver	On / Off.
Last Memory	On / Off.

Audio Setup Page

FUNCTION	OPTION
Speaker Setup	Downmix, LT/RT, Stereo.

Video Setup Page

FUNCTION	OPTION
Panel Quality	Quality Panel Setup.
Sharpness	High, Medium, Low.
Brightness	Range select -18 to +18.
Contrast	Range select -12 to +12.
Hue	Range select -9 to +9.
Saturation	Range select -9 to +9.

Preference Page

FUNCTION	OPTION
TV Type	PAL, NTSC, Auto.
Audio	Language selection list.
Subtitle	Language selection list.
Disc Menu	Language selection list.
Parental	KID SAF, G, PG, PG13, PGR, R, NC17, ADULT.
Password	On / Off, Change / Set Password.
Default	Reset

After Sales Support

UK/N.IRELAND HELPLINE N^o: 01270 508538
REP.IRELAND HELPLINE N^o: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk

Specifications

Compatible Disc Formats	DVD, DVD-R, DVD+R/RW, CD, CD-RW
Compatible Video Formats	DVD, AVI, DIVX, MP4
Compatible Image Formats	JPEG, JPG
Panel Size	9 Inches
Frequency Response	20Hz to 20KHz
Video Output	1Vp-p75 0Hm unbalanced
Audio Output	1.8Vrms/10K 0Hm
Dynamic Range	Greater than 85Db
Laser	Semiconductor laser, Wave length: 650Nm/795Nm
Power Source	DC-9.5V - 1.5A
Power Consumption	14.3W
Operation Temperature	5-40°C
Battery Type	Lithium-Polymer
Car Adaptor Fuse	3A

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538
REP.IRELAND HELPLINE N°: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk



Warranty Certificate

Warranty

This product is guaranteed to be free from defects in workmanship and parts for a period of 36 months from the date of purchase. Defects that occur within this warranty period, under normal use and care, will be repaired, replaced or refunded at our discretion, solely at our option with no charge for parts and labour. The benefits conferred by this warranty are in addition to all rights and remedies in respect of the product the consumer has under existing U.K. laws.

Proof of Purchase

This warranty is valid for the original purchase and is not transferable.

Please keep your purchase receipt as proof of purchase and as proof of the date of when the purchase was made. The receipt must be presented with the warranty card when making a claim under this warranty.

Service during the Warranty Period

Please ensure the product is properly packaged so as to ensure that no damage occurs in transit. Also make sure that you have included a detailed explanation of the problem.

Extent of the Warranty

This warranty is limited to defects in workmanship or parts. All defective products or parts will be repaired or replaced. This warranty does not extend to accessories.

Normal Wear and Tear

This warranty does not cover normal wear and tear of the product or parts.

Exclusions

This warranty does not cover the following:

- Any defect caused by accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorised modification, loss of parts, tampering or attempted repair by a person not authorised by the distributor.
- Any product that has been damaged by lightning strike either directly or indirectly, or on a main's or vehicle outlet power surge or liquid ingress.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer's operating instructions provided with the product.
- Any product that has been used for purposes other than domestic use.
- The product if it is located outside of the U.K. and Ireland
- Any damage caused by improper power input or improper cable connection.

After Sales Support

UK/N.IRELAND HELPLINE N°: 01270 508538
REP.IRELAND HELPLINE N°: 1800 995 036
WEBSITE: www.qesh.co.uk
EMAIL: enquiries@qesh.co.uk





Warranty Card

9" In-Car DVD Player

Model Number: 61278

Please keep your purchase receipt together with your warranty card

Name: _____

Address: _____

 _____

Date of purchase: _____

Location of purchase: _____

Fault Description:

We recommend that you attach a photocopy of your receipt, showing the date of purchase, to this warranty card and keep it for your reference. In the event of a product fault, please call the After Sales Support team. Please ensure that you have the product details (as shown on this card) to hand so that the support team are able to respond as quickly and efficiently as possible.

After Sales Support

UK/N.IRELAND HELPLINE N^o: 01270 508538
REP.IRELAND HELPLINE N^o: 1800 995 036
WEBSITE: www.quesh.co.uk
EMAIL: enquiries@quesh.co.uk

Service Helpline

QUESH LTD,
1 SOLWAY COURT,
CREWE BUSINESS PARK,
CW1 6LD



